



Stick 'n Grip Tape (054.2x180CL)

Area Preparation

- To obtain optimal adhesion, the mat surface and floor must be dry, relatively clean and free of dust.
- Lay the mat down on a table or flip mat over on a flat surface and proceed to apply tape to the bottom of the mat.
- Get a pair of scissors to cut the tape to length.

TOOLS NEEDED:

You will need a pair of scissors to cut the tape when applying it to the bottom of the mat.




Installation Instructions


1. On the length of the mat, apply a strip of tape from end to end.




2. Cut tape and press along the strip to ensure it is firmly applied.

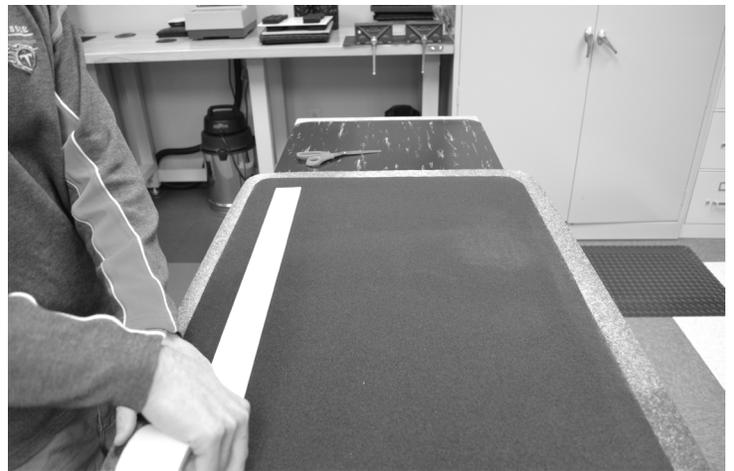

3. Peel off the white top layer leaving the clear tape behind.

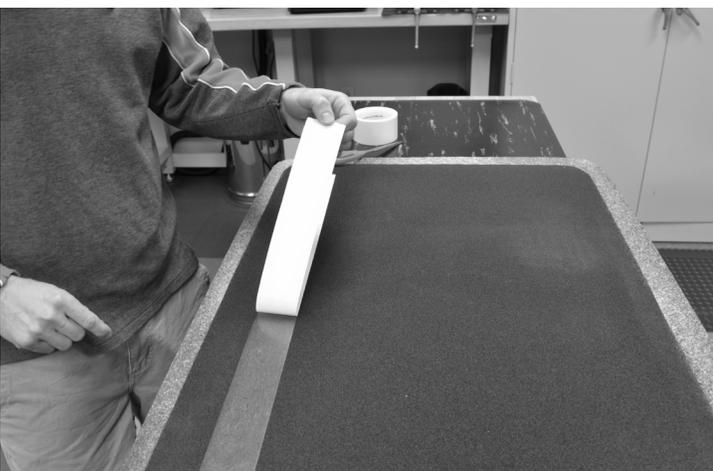

4. Repeat these steps to apply tape to the other end of the mat.

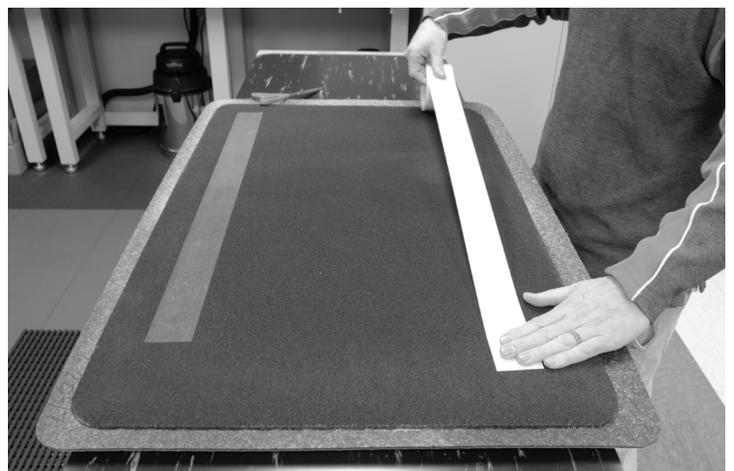

5. Make sure the floor area where the mat will be placed is clean and dry then put the mat down.

6. Congratulations, you have completed the application and installation of Stick'n Grip Tape.

Questions?

NORTH AMERICA - Wearwell, LLC
Phone: 1.800.264.3030
Wearwell.com

CANADA
Wearwell.com/ca
MEXICO
Wearwell.com/mx

EUROPE, UK & IRELAND -
Wearwell Europe LTD
Phone: +44.1525.307271
www.wearwell.com/uk

FRANCE
www.wearwell.com/fr
GERMANY
www.wearwell.com/de