

LAMINATED MATTING


INSTALLATION INSTRUCTIONS



Using a shop vac or broom, clean the area of dust and debris.



If the area is still dirty or has been exposed to greases or oils, use a general cleaning solution to wipe down the floor with a towel or mop.

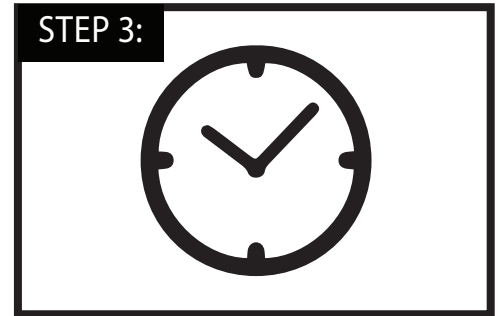


If a cleaning solution was used to clean the area, give the surface some time to dry.



Remove the mat from packaging and inspect for any dirt/debris. Use a damp towel and general cleaning solution to remove any dust or dirt from both the top and bottom of the mat. Let dry.



Position and place the mat sponge-side down onto the clean, dry floor.

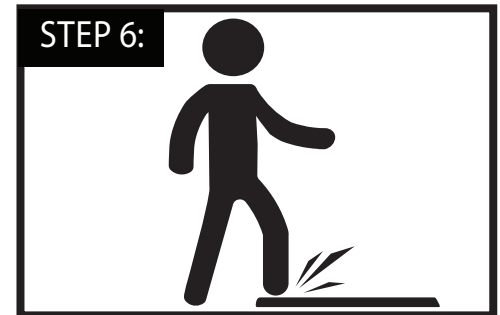

Walk along the mat and edges to tamp the mat down to the floor.

Note: As the mat acclimates it will lay flatter to the floor. This process may take longer in colder temperatures. Please allow 24 hours for the mat to fully acclimate.

Questions?

NORTH AMERICA - Wearwell, LLC
Phone: 1.800.264.3030
Wearwell.com

CANADA
Wearwell.com/ca

MEXICO
Wearwell.com/mx

EUROPE, UK & IRELAND -
Wearwell Europe LTD
Phone: +44.1525.307271
www.wearwell.com/uk

FRANCE
www.wearwell.com/fr

GERMANY
www.wearwell.com/de