
SWEARWELL

24/Seven® LockSafe®

Thank you for your purchase, you've made a wise investment.

- Place mat on floor, position ramps
- Attach ramp sides first by aligning the LockSafe® connector males into the female connector.
- Apply pressure for LockSafe or utilize rubber mallet to ensure snap of connector.
- Attach corner to remaining male connector into female connector, again applying pressure for LockSafe
- Place mat in position. Enjoy comfort.
- If connecting multiple mats for larger area. connect mats together with same alignment of male and female connectors first.
- Next connect the ramps following the above instructions
- Finally, connect the corners following the above instruction

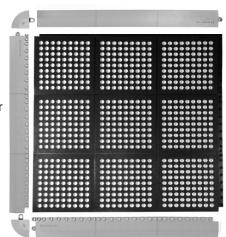




PRODUCT	PART NUMBER	SIZE	COLOR
24/Seven® LockSafe® Solid GR	577.58x3x3GR	3' x 3'	BK
24/Seven® LockSafe® Solid NBR	577.58x3x3NBR	3' x 3'	BK
24/Seven® LockSafe® Drainage GR	578.58x3x3GR	3' x 3'	BK
24/Seven® LockSafe® Drainage NBR	578.58x3x3NBR	3' x 3'	BK
24/Seven® LockSafe® Solid NBR w/Gritshield	584.58x3x3NBR	3' x 3'	BK
24/Seven® LockSafe® Open NBR w/Gritshield	586.58x3x3NBR	3' x 3'	BK
24/Seven® LockSafe® GR Ramps - Female	578.EdgingFGR	3" x 39"	BK
24/Seven® LockSafe® GR Ramps - Male	578.EdgingMGR	3" x 39"	BK
24/Seven® LockSafe® GR Ramps Outside Comer	578.CornerGR-CS4	4" x 3"	BK
24/Seven® LockSafe® NBR Ramps - Female	578.EdgingFNBR	3" x 39"	BK, YL
24/Seven® LockSafe® NBR Ramps - Male	578.EdgingMNBR	3" x 39"	BK, YL
24/Seven® LockSafe® NBR Ramps Outside Corner	578.CornerNBR-CS4	4" x 3"	BK, YL



Area Preparation

Prepare the Floor

- This product was designed for interior use. It can be installed in dry, wet, oily or slippery areas.
- It is recommended to sweep the surface of dust and debris before beginning.

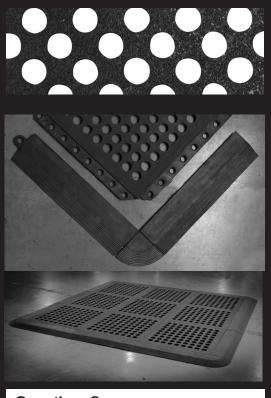

Questions?

NORTH AMERICA - Wearwell, LLC

Phone: 1.800.264.3030

Wearwell.com

CANADA

Wearwell.com/ca

MEXICO

Wearwell.com/mx

EUROPE, UK & IRELAND - Wearwell Europe LTD

Phone: 44.1844.212117 www.wearwell.com/uk

FRANCE

www.wearwell.com/fr

GERMANY

www.wearwell.com/de

Suggested Tools

■ Mallet

Required Tools (if customizing)

- Utility knife or industrial shears
- Leather or Kevlar® gloves
- Measuring tape
- Straight edge

Optional Cutting Tools

- Skil® saw
- Band saw

RECOMMENDED

Wear protective gloves when using a cutting tool or handling products with a grit surface.

We recommend leather or Kevlar® gloves.