




24/Seven® LockSafe® Installation Instructions

AREA PREPERATION

- Sweep the surface of dust and debris before beginning.

INSTALLATION

- Place mat on floor, position ramps
- Attach ramp sides first by aligning the LockSafe® connector males into the female connector.
- Apply pressure for LockSafe or utilize rubber mallet to ensure snap of connector.
- Attach corner to remaining male connector into female connector, again applying pressure for LockSafe
- Place mat in position. Enjoy comfort.
- If connecting multiple mats for larger area. connect mats together with same alignment of male and female connectors first.
- Next connect the ramps following the above instructions
- Finally, connect the corners following the above instruction

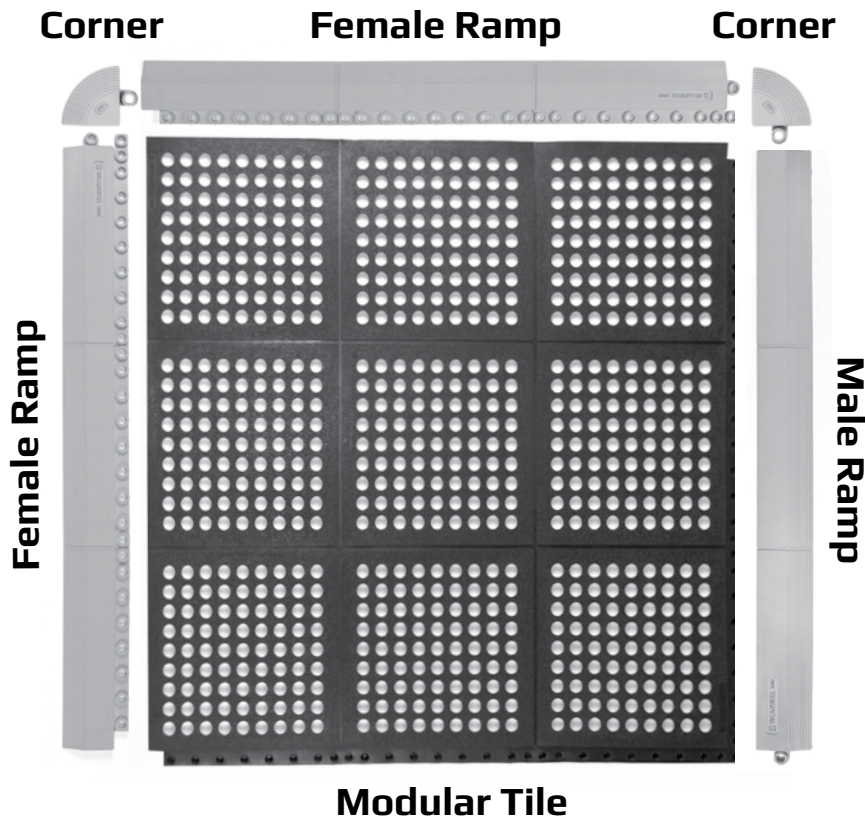

RECOMMENDED

Wear protective gloves when using a cutting tool or handling products with a grit surface. We recommend leather or Kevlar® gloves.

SUGGESTED TOOLS

- Mallet

Required Tools (if customizing)

- Utility knife or industrial shears
- Leather or Kevlar® gloves
- Measuring tape
- Straight edge

Optional Cutting Tools

- Skil® saw
- Band saw

QUESTIONS?

NORTH AMERICA - Wearwell, LLC
Phone: 1.800.264.3030
Wearwell.com

CANADA
Wearwell.com/ca

MEXICO
Wearwell.com/mx

EUROPE, UK & IRELAND - Wearwell Europe LTD
Phone: 44.1844.212117
www.wearwell.com/uk

FRANCE
www.wearwell.com/fr

GERMANY
www.wearwell.com/de

SCAN TO SEE 24/Seven® LockSafe® CUTTING INSTRUCTIONS



* Reconnection does not apply to 24/Seven® LockSafe® MAX