

INSTRUCTION SHEET

ERGODECK® CABLE BRIDGE KIT ASSEMBLY

Corner Kit - 560.78x15x15BLYL

Contents: (1) yellow inside corner ramp (1) yellow outside corner ramp (2) yellow side ramps

(2) 6" wide blue tiles

NOTE: Use firm pressure or a rubber mallet to connect. You will hear/feel a "click" when connectors are fully engaged.



Arrange all components upside down in configuration shown below, paying particular attention to the placement of all tabs




Connect tabs to corresponding rods on 2 blue center tiles



Connect end tabs to corresponding end rods to join 3 outside ramp components


4

Lay inside tabs of outside corner section and inside corner over corresponding rods of blue center tiles and connect.

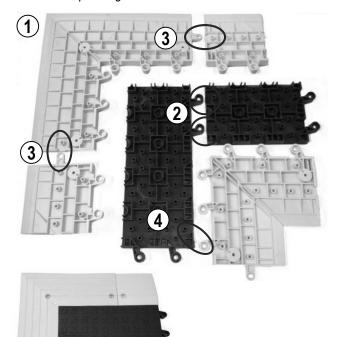

Assembled Dimensions: 15" wide x 15" long

INSTALLATION

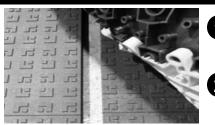

Create 1-2" channel between ErgoDeck® floor tiles.

2 Route cables/wires.


Straight Kit - 560.78x18x36BLYL

Contents: (4) yellow 18" side ramps (2) 6" wide blue tiles

NOTE: Use firm pressure or a rubber mallet to connect. You will hear/feel a "click" when connectors are fully engaged.





Arrange all components upside down in configuration shown below, paying particular attention to the placement of all tabs






Connect end tabs to corresponding end rods on both sections of side ramps



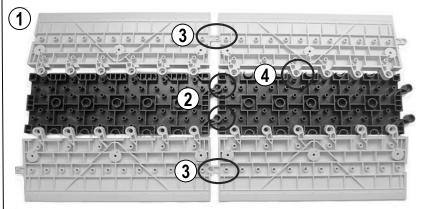



Assembled Dimensions: 18" wide x 36" long



(optional) Anchor bridge to tiles with 12 - ¾" metal screws.

Wearwell, Inc. • 199 Threet Industrial Road • Smyrna • Tennessee • 37167 • Phone: 1.800.264.3030 Fax: 615.255.4428 • www.wearwell.com